

General Specifications	CL250	CL350
Rated Load:	250 lbs. (113 kg)	350 lbs. (160 kg)
Drive:	AC Powered, belt driven winding cable / 90 VDC ½ hp motor	AC Powered, 3/16" diameter aircraft cable
Power Supply:	115 VAC 20 amp grounded circuit	115 VAC 20 amp grounded circuit
Control Circuit:	15 VDC	24 VAC
Platform / Car:	36" x 24" (91.4 cm x 61 cm) with 24" (61 cm) high panels	18" x 36" (46 cm x 91.4 cm)
Folded Width:	N/A	14" folded
Travel:	10' 6" (320 cm) standard; available up to 26' (792.5 cm)	Up to 25' (Weight limit reduced to 250 lbs. if over 19')
Speed:	20 feet per minute	20 feet per minute
Controls:	Wired call / send controls (constant pressure)	Wall mounted call / send controls
Safety Features:	Slack cable brake with electrical shut off Upper and lower landing limits Upper final limit	Platform folds to save space when not in use Slack Cable Brake with electric shutoff
Warranty:	1-Year on parts	1-Year on parts



CL250 Coastal Cargo Lift

Transports up to 250 lbs. indoors or out — corrosion-resistant finish is ideal for coastal areas. Pre-installed car and drive system for fast, easy installation.

- Pre-installed car and drive system on track section
- No pulleys to install
- Wired call/send controls (constant pressure)
- AC powered belt-driven winding cable / 90 VDC ½ hp motor
- 15 VDC control circuit
- Car: 36" x 24" (91.4 cm x 61 cm) with 24" (61 cm) high panels
- Slack cable brake with electrical shut off
- Upper and lower landing limits, upper final limit.
- 1-Year parts warranty



CL350 Incline Cargo Lift


Mounts easily on a stairway to move up to 350 lbs. When not in use, fold the platform to increase space for foot traffic. Operates on standard 115 VAC current; track lengths can fit most stair lengths.

- Extruded aluminum track available in custom lengths
- Operates on 115 VAC household current
- Platform folds to save space when not in use
- Mounts to staircase (not wall)
- Intended to carry cargo only
- Constant pressure controls
- 1-Year parts warranty

CL3500D Outdoor Incline Cargo Lift

As above with:

- Zinc-plated Components
- Multiple covers designed for exterior environments

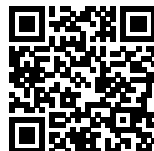

THE SHORTEST DISTANCE BETWEEN TWO LEVELS

Harmar Cargo Lifts make it easier and safer to move heavy or bulky items. The small footprint of the Harmar Coastal Lift saves manpower and time as it transports supplies easily from one level to another. Harmar Cargo Lifts turn a current stairway into space for moving goods. All are fast and easy to install.



CL250 Coastal Vertical Cargo Lift



CL350 Incline Cargo Lift



Harmar[®]
America's Lift Leader[™]